

# **Precision Pipe Fittings**

# Index

CNP-Close Nipple	4
NP-Hex Nipple	4
RNP-Hex Reducing Nipple	4
LNP-Hex Long Nipple	5
AP-Adapter	5
RAP-Reducing Adapter	5
RBP-Reducing Bushing	6
CGP-Hex Coupling	6
RCGP-Reducing Coupling	6
CPP-Cap	7
PP-Plug	7
FLP–Female Elbow	7
SLP-Street Elbow	8
RSLP–Reducing Strt Elbow	8
MLP-Male Elbow	9
FTP–Female Tee	9
STP-Street Tee	9
FTBM-Male Branch Tee	9
MTP–Male Tee	10
CSP-Cross	10








# Hoke Precision Instrument Pipe Fittings Hoke Precision Instrument Pipe Fittings are manufactured with high quality NPT tapered threads in a wide vari-

ety of configurations to provide broad application capabilities.

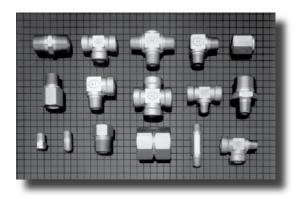

### **Technical Data**

THREADS	Threads utilized on Hoke Preci Pipe fittings are National Pipe exceed the requirements of AN	Taper (NPT) which
PRESSURE RATINGS	Pressure ratings for temperatu identified for each individual p dimensional data charts.	
TEMPERATURE*	Temperatures noted below ap capabilities. In all cases conside given to the type of thread example, Teflon® tape has a mature rating of 450° F. 316 Stainless Steel: -325° F to +1200° F (-198° C to +187) Brass: -325° F to +400° F (-198° C to +188)	eration must also sealant used. For aximum tempera- -648° C)
MATERIALS	Hoke Precision Pipe Fittings ar standard in Brass and 316 Stair pipe fittings can also be suppli als including, Monel, Hastelloy Titanium and in special shapes standard materials are: 316 Stainless Steel Forgings 316 Stainless Steel Bar Stock Brass Forgings, Alloy 377 Brass Bar Stock, Alloy 353 Brass Bar Stock, Alloy 360	e available as nless Steel. Hoke ed in other materi- C, Inconel and
HEAT TRACEABILITY	Hoke's 316 Stainless Steel Precipipe Fittings are heat code traccertified material test reports (components, place separate or and specify "CMTR'S required"	ceable. To obtain CMTR'S) for these rders for such items

<sup>\*</sup> Prolonged exposure to temperature over 800° F is not recommended.

#### **Features & Benefits**

#### Feature 1

#### Feature 2

#### **HOKE Incorporated**

# Hoke Pipe Fitting Part Numbering


The part numbering system for Hoke Precision Instrument Pipe Fittings is completely descriptive and easily understood.

#### Example:

PIPE SIZE IN SIXTEENTHS OF AN INCH	PIPE FITTING TYPE	PIPE SIZE (IF DIFFERENT) IN SIXTEENTHS OF AN INCH	MATERIAL BRASS – BR 316 SS – 316 EXAMPLE: 4RAP2316
4	RAP	2	316
1/4 NPT	Reducing Adapter	1/8 NPT	316 Stainless Steel

# **Assembly Instructions**

To ensure a leak-tight seal, the use of a pipe thread sealant is recommended. One commonly utilized technique is Teflon® Tape. The chart below provides information regarding the recommended tape width and the approximate number of threads which should be wrapped

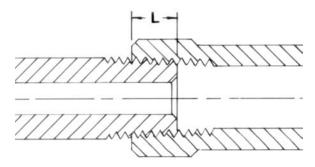


NOMINAL PIPE SIZE	RECOMMENDED TAPE WIDTH	EFFECTIVE THREAD LENGTH (EXTERNAL) L*	APPROX. # OF THREADS
1/8	1/8 – 1/4	1/4	7
1/4	1/4	3/8	7 1/3
3/8	1/4	3/8	7 1/2
1/2	1/4 – 1/2	1/2	7 1/2
3/4	1/4 – 1/2	9/16	7 2/3
1	1/4 – 1/2	11/16	8

<sup>\*</sup> ISA Handbook of Control Valves. Note: Dimensions are in inches. The Pipe Thread Sealants may have lower temperature capabilities than the basic fitting.


Example: For a 1/4 NPT, "L" = 3/4"

Approximate number of threads which should be wrapped = 7 1/3

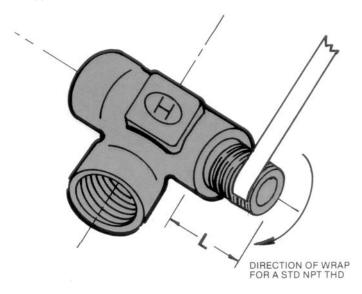


# **CNP Close Nipple (male NPT both ends)**

ORDER BY PART	PIPE SIZE	DIMEN	WORKING PRESSURE (PSIG)		
NUMBER	MALE	A	E (MIN. OPENING)	BRASS	316SS
4CNP - []	1/4	1 1/8	9/32	5700	9900
6CNP -[]	3/8	1 1/8	3/8	5500	9000
8CNP - []	1/2	1 1/2	27/64	5400	8900
12CNP - []	3/4	1 1/2	5/8	4600	8300

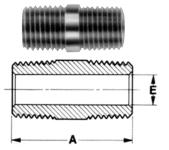


### NP Hex Nipple (male NPT both ends)

ORDER BY PART	PIPE SIZE		DIMENSIONS	WORKING PRESSURE (PSIG)		
NUMBER	MALE	A	E MIN	F HEX	BRASS	316SS
1NP -[]	1/16	1 13/64	1/8	5/16	7100	12,300
2NP -[]	1/8	1 7/32	3/16	7/16	7100	13,000
4NP -[]	1/4	1 19/32	9/32	9/16	5700	9900
6NP -[]	3/8	1 5/8	3/8	11/16	5500	9000
8NP -[]	1/2	2	15/32	7/8	5400	8900
12NP - []	3/4	2	5/8	1 1/16	4600	8300
18NP - []	1	2 1/4	7/8	1 3/8	3400	5900

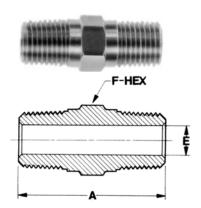

# RNP Hex Reducing Nipple (male NPT to reduced male NPT)


ORDER BY PART	PIPE SIZE			DIMENSIONS	WORKING PRESSURE (PSIG)		
NUMBER	MALE	REDUCED MALE	A	E MIN	F HEX	BRASS	316SS
2RNP1 – [ ]	1/8	1/16	1 3/16	3/32	7/16	7100	12,300
4RNP2 – []	1/4	1/8	1 9/32	3/16	9/16	7100	12,300
6RNP4 – []	3/8	1/4	1 1/2	9/32	11/16	5700	9900
8RNP4 – [ ]	1/2	1/4	1 11/16	9/32	7/8	5700	9900
8RNP6 – []	1/2	3/8	1 11/16	3/8	7/8	5500	9000
12RNP6 – []	3/4	3/8	1 23/32	3/8	1 1/16	5500	9000
12RNP8 – [ ]	3/4	1/2	1 29/32	7/16	1 1/16	6200	10,100
16RNP8 – []	1	1/2	2 9/32	7/16	1 3/8	6200	10,100
16RNP12 – []	1	3/4	2 9/32	5/8	1 3/8	4600	8300

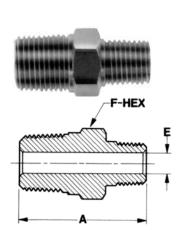


### LNP hex long nipple (male NPT both ends)

ORDER BY PART NUMBER	PIPE SIZE		DIMENSIONS		WORKING PRI	SSURE (PSIG)
	MALE	A	E MIN	F HEX	BRASS	316SS
2LNP - [ ]/200	1/8	2	3/16	7/16	7100	12,300
2LNP – [ ]/250	1/8	2 1/2	3/16	7/16	7100	12,300
4LNP – [ ]/200	1/4	2	9/32	9/16	5700	9900
4LNP – [ ]/250	1/4	2 1/2	9/32	9/16	5700	9900
4LNP – [ ]/300	1/4	3	9/32	9/16	5700	9900
4LNP – [ ]/400	1/4	4	9/32	9/16	5700	9900
6LNP – [ ]/200	3/8	2	11/16	11/16	5500	9000
6LNP – [ ]/250	3/8	2 1/2	11/16	11/16	5500	9000
6LNP - [ ]/400	3/8	4	11/16	11/16	5500	9000
8LNP – [ ]/300	1/2	3	7/8	7/8	5400	8900
12LNP - [ ]/300	3/4	3	1 1/16	1 1/16	4600	8300
16LNP - []/300	1	3	1 3/8	1 3/8	3400	5900
16LNP - [ ]/400	1	4	1 3/8	1 3/8	3400	5900




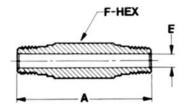

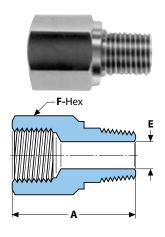


### AP Adapter (female NPT same size male NPT)

ORDER BY PART	PIPE SIZE		DIMENSIONS	WORKING PRI	ESSURE (PSIG)	
NUMBER	MALE	A	E MIN	F HEX	BRASS	316SS
2AP – [ ]	1/8	1	3/16	9/16	4200	7300
4AP – []	1/4	1 3/8	9/32	3/4	4200	7300
6AP – []	3/8	1 9/16	3/8	7/8	3400	5500
8AP – []	1/2	1 29/32	15/32	1 1/16	2700	4900
12AP – []	3/4	1 31/32	21/32	1 1/4	2100	3700

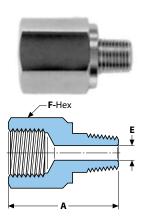

### RAP Reducing Adapter (female NPT to reduced male NPT)

ORDER BY PART	PIPE	SIZE		DIMENSIONS	WORKING PRESSURE (PSIG)		
NUMBER	FEMALE	MALE	A	E MIN	F HEX	BRASS	316SS
4RAP2 – []	1/4	1/8	1 1/4	3/16	3/4	4200	7300
6RAP2 – []	3/8	1/8	1 5/16	3/16	7/8	3400	5500
6RAP4 – []	3/8	1/4	1 1/2	9/32	7/8	3400	5500
8RAP4 – [ ]	1/2	1/4	1 3/4	9/32	1 1/16	2700	4900
8RAP6 – []	1/2	3/8	1 3/4	3/8	1 1/16	2700	4900
12RAP4 – [ ]	3/4	1/4	1 13/16	9/32	1 1/4	2100	3700
12RAP6 – []	3/4	3/8	1 13/16	3/8	1 1/4	2100	3700
12RAP8 – []	3/4	1/2	2	15/32	1 1/4	2100	3700
16RAP8 – []	1	1/2	2 1/4	15/32	1 5/8	2500	4300
16RAP12 – []	1	3/4	2 1/4	5/8	1 5/8	2500	4300

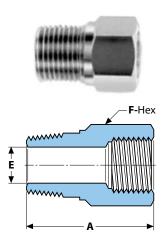


### RBP Reducing Bushing (male NPT to reduced female NPT)

ORDER BY PART NUMBER	PIPE	PIPE SIZE		DIMENSIONS			ESSURE (PSIG)
	MALE	FEMALE	A	E MIN	F HEX	BRASS	316SS
2RBP1 – []	1/8	1/16	1	3/16	7/16	7000	12,200
4RBP2 – [ ]	1/4	1/8	1	9/32	9/16	4200	7300
6RBP2 – []	3/8	1/8	1 1/8	11/32	3/4	6600	11,400
6RBP4 – [ ]	3/8	1/4	1 1/8	3/8	3/4	4200	7300
8RBP4 – [ ]	1/2	1/4	1 5/32	7/16	7/8	5700	9300
8RBP6 – [ ]	1/2	3/8	1 5/32	7/16	7/8	2900	4800
12RBP4 – [ ]	3/4	1/4	1 7/32	7/16	1 1/16	7300	13,100
12RBP6 – [ ]	3/4	3/8	1 9/16	37/64	1 1/16	5200	9400
12RBP8 – [ ]	3/4	1/2	1 9/16	5/8	1 1/16	4000	7300
16RBP8 – []	1	1/2	1 9/16	23/32	1 3/8	5600	9500
16RRP12 - [ ]	1	3/4	1 3/4	7/8	1 3/8	3200	5400

### **CGP Hex Coupling (female NPT both ends)**

ORDER BY PART	PIPE SIZE		DIMENSIONS	WORKING PRESSURE (PSIG)		
NUMBER	FEMALE	A	E MIN	F HEX	BRASS	316SS
2CGP - []	1/8	13/16	11/32	9/16	4200	7300
4CGP - []	1/4	1 1/8	7/16	3/4	4200	7300
6CGP - []	3/8	1 1/4	37/64	7/8	3400	5500
8CGP – []	1/2	1 1/2	23/32	1 1/16	2700	4900
12CGP - []	3/4	1 9/16	59/64	1 1/4	2100	3700
16CGP – [ ]	1	2	1 1/64	1 5/8	2500	4300




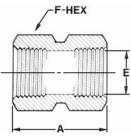

#### RCGP Reducing Coupling (female NPT to reduced female NPT)

ncor neduci	iig Coupi	ing (ieini	ale NP i to	reduced	ieiliale iv	P1)	
ORDER BY PART	PIPE	SIZE		DIMENSIONS	WORKING PRI	WORKING PRESSURE (PSIG)	
NUMBER	FEMALE	MALE	A	E MIN	F HEX	BRASS	316SS
4RCGP2 – [ ]	1/4	1/8	1	11/32	3/4	4200	7300
6RCGP4 – [ ]	3/8	1/4	1 3/8	7/16	7/8	3400	5500
8RCGP4 – [ ]	1/2	1/4	1 1/2	7/16	1 1/16	2700	4900
8RCGP6 – []	1/2	3/8	1 1/2	37/64	1 1/16	2700	4900
12RCGP4 - []	3/4	1/4	1 23/32	7/16	1 1/4	2100	3700
12RCGP6 - []	3/4	3/8	2 1/16	37/64	1 1/4	2100	3700
12RCGP8 – []	3/4	1/2	2 1/16	23/32	1 1/4	2100	3700
16RCGP8 – [ ]	1	1/2	2 3/16	23/32	1 5/8	2500	4300
16RCGP12 - []	1	3/4	2 1/4	59/64	1 5/8	2500	4200



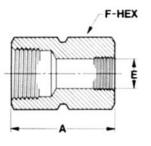


# **CPP Cap (female NPT)**

• •	-				
ORDER BY PART NUMBER	PIPE SIZE	DIMENSIONS		WORKING PRI	ESSURE (PSIG)
	FEMALE	A	F HEX	BRASS	316SS
2CPP – [ ]	1/8	11/16	9/16	4200	7300
4CPP – []	1/4	7/8	3/4	4200	7300
6CPP – []	3/8	1 1/32	7/8	3400	5500
8CPP – []	1/2	1 1/4	1 1/16	2700	4900
12CPP – [ ]	3/4	1 7/16	1 1/4	2100	3700
16CPP – [ ]	1	1 5/8	1 5/8	2500	4300





F-HEX

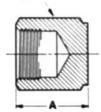

# PP Plug (male NPT)


ORDER BY PART NUMBER	PIPE SIZE	DIMENSIONS			
	MALE	A	F HEX		
1PP – [ ]	1/16	47/64	5/16		
2PP – [ ]	1/8	3/4	7/16		
4PP – [ ]	1/4	15/16	9/16		
6PP – [ ]	3/8	1	11/16		
8PP – [ ]	1/2	1 1/4	7/8		
12PP – [ ]	3/4	1 5/16	1 1/16		
16PP – [ ]	1	1 11/16	1 3/8		

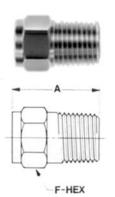

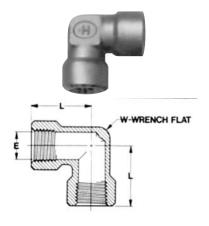


### FLP Female Elbow (female NPT both ends)

ORDER BY PART	PIPE SIZE		DIMENSIONS		WORKING PRESSURE (PSIG)		
NUMBER	FEMALE	L	E MIN	W	BRASS	316SS	
2FLP – [ ]	1/8	3/4	11/32	1/2	3600	5600	
4FLP – [ ]	27/32	27/32	7/16	11/16	2900	4600	
6FLP – [ ]	1	1	37/64	13/16	2300	3700	
8FLP – []	1 1/8	1 1/8	23/32	1	2200	3500	
12FLP – [ ]	1 1/4	1 1/4	59/64	1 1/4	2200	3400	

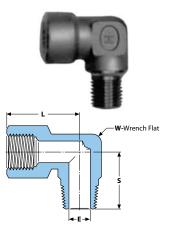


### **SLP Street Elbow (female to male NPT)**

ORDER BY PART	PIPE SIZE		DIMEN	WORKING PRESSURE (PSIG)			
NUMBER	FEMALE	L	S	E MIN	W	BRASS	316SS
1SLP – [ ]	1/16	3/4	23/32	1/8	7/16	5000	7900
2SLP – [ ]	1/8	3/4	25/32	3/16	1/2	3600	5600
4SLP – []	1/4	27/32	1 1/8	9/32	11/16	2900	4600
6SLP – []	3/8	1	1 1/4	3/8	13/16	2300	3700
8SLP – []	1/2	1 1/8	1 11/32	15/32	1	2200	3500
12SLP – [ ]	3/4	1 7/16	1 1/2	5/8	1 1/4	2200	3400

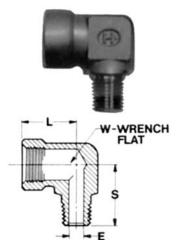

### RSLP Reducing Street Elbow (female NPT reduced male NPT)

ORDER BY PART	PIPE	SIZE		DIMENSIONS			WORKING PRESSURE (PSIG)		
NUMBER	FEMALE	REDUCED FEMALE	L	S	E MIN	W	BRASS	316SS	
6RSLP4 – []	3/8	1/4	1	1 1/8	9/32	13/16	2300	3700	
8RSLP4 – [ ]	1/2	1/4	1 1/4	1 1/8	9/32	1	2200	3500	
8RSLP6 – []	1/2	3/8	1 1/2	1 5/32	13/32	1	3600	5600	

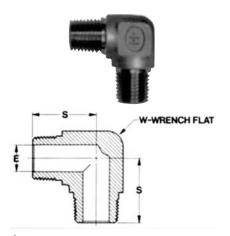


#### **MLP Male Elbow (male NPT both ends)**

			•			
ORDER BY PART	PIPE SIZE		DIMENSIONS	WORKING PRESSURE (PSIG)		
NUMBER	MALE	S	E MIN	W	BRASS	316SS
2MLP – []	1/8	23/32	3/16	7/16	6200	9700
4MLP – []	1/4	61/64	9/32	11/16	5000	7800
6MLP – []	3/8	1	3/8	11/16	4800	7500
8MLP – []	1/2	1 3/16	15/32	1	4700	7400
12MLP – [ ]	3/4	1 1/2	5/8	1 1/4	4400	6900


### FTP Female Tee (female NPT all ports)

ORDER BY PART	PIPE SIZE		DIMEN	WORKING PRESSURE (PSIG)			
NUMBER	FEMALE	A	L	E MIN	W	BRASS	316SS
2FTP – [ ]	1/8	1 1/2	3/4	11/32	1/2	3600	5600
4FTP – []	1/4	1 11/16	27/32	7/16	11/16	2900	4600
6FTP – [ ]	3/8	2	1	37/64	13/16	2300	3700
8FTP – [ ]	1/2	2 1/4	1 1/8	23/32	1	2200	3500
12FTP – [ ]	3/4	2 7/8	1 7/16	59/64	1 5/8	4200	7900

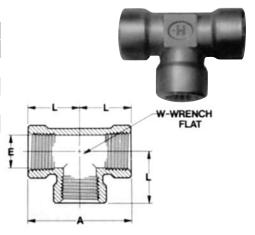


### STP Street Tee (female by male run/female branch)

		•								
ORDER BY PART	PIPE SIZE			DIMENSIONS			WORKING PRI	WORKING PRESSURE (PSIG)		
NUMBER		A	L	S	E MIN	W	BRASS	316SS		
2STP - []	1/8	1 17/32	3/4	25/32	3/16	1/2	3600	5600		
4STP - []	1/4	1 27/32	27/32	1	9/32	11/16	2800	4500		
6STP – []	3/8	2 1/8	1	1 1/8	3/8	13/16	2300	3700		
8STP - []	1/2	2 15/32	1 1/8	1 11/32	15/32	1	2200	3500		
12STP - []	3/4	3 7/64	1 7/16	1 5/8	5/8	1 5/8	3800	7200		

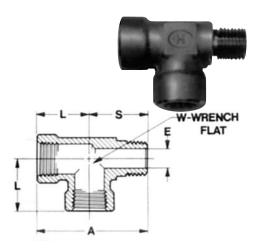


### FTBM Male Branch Tee (female run/male branch)


ORDER BY PART	PIPE SIZE			WORKING PRESSURE (PSIG)				
NUMBER		A	L	S	E MIN	W	BRASS	316SS
2FT/BM2 – []	1/8	1 11/16	27/32	27/32	3/16	11/16	6200	9700
4FT/BM4 – [ ]	1/4	1 11/16	27/32	1	9/32	11/16	2900	4600
6FT/BM6 – []	3/8	2	1	1 1/8	3/8	13/16	2300	3700
8FT/BM8 – []	1/2	2 1/4	1 1/8	1 11/32	15/32	1	2200	3500

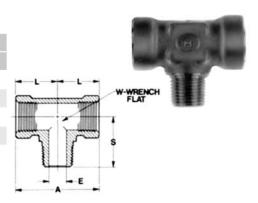

### MTP Male Tee (male NPT all ports)

ORDER BY PART	PIPE SIZE		DIMEN	WORKING PRESSURE (PSIG)			
NUMBER	MALE	A	S	E MIN	W	BRASS	316SS
2MTP – [ ]	1/8	1 1/2	3/4	3/16	7/16	6200	9700
4MTP – [ ]	1/4	2	1	9/32	11/16	5000	7800
6MTP – [ ]	3/8	2	1	3/8	11/16	4800	7500
8MTP – [ ]	1/2	2 17/32	1 17/64	15/32	1	4700	7400
12MTP – [ ]	3/4	3	1 1/2	5/8	1 1/4	4400	6900

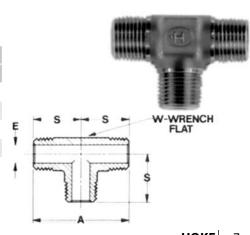

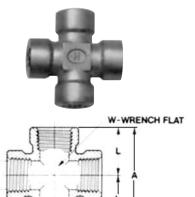

#### **CSP Cross**

ORDER BY PART	PIPE SIZE		DIMEN	WORKING PRESSURE (PSIG)			
NUMBER	FEMALE	A	L	E MIN	W	BRASS	316SS
2CSP - []	1/8	1 11/16	27/32	11/32	11/16	6900	10,800
4CSP – []	1/4	1 11/16	27/32	7/16	11/16	2800	4500
6CSP - []	3/8	2	1	37/64	1	4600	7200
8CSP - []	1/2	2 1/4	1 1/8	23/32	1	2200	3500

## Safety Instructions

- 1. Do not tighten or loosen any part of a fitting or valve when the system is pressurized. Make sure the system is not pressurized when tightening or loosening a fitting or valve connection.
- 2. Do not loosen Hoke Gyrolok® nut or any product component in order to relieve or bleed down system pressure.
- 3. Do not exceed pressure-temperature specifications stated in the appropriate catalog.
- 4. When the application involves use of a toxic or hazardous fluid, exercise extra caution during operation and maintenance.
- 5. Before assembling new, unused Hoke Gyrolok® tube fitting ends, loosen the Hoke Gyrolok® nut before inserting the tube to allow full insertion of the tube to the base of the body bore.
- 6. Always use tubing that is compatible with the fitting or valve material. Tubing appropriate for use with Hoke products is described in Hoke's Tubing Data Charts. For example, use 316 Stainless Steel fittings with 316 Stainless Steel tubing.
- 7. Always leave a length of straight tube between the tube bend and the fitting. A tube bent too close to the fitting connection may be a source of leakage.
- 8. During assembly of the Hoke Gyrolok® tube end, always hold the fitting or valve body with one wrench while separately wrench tightening the Hoke Gyrolok® nut. Follow the same precaution when disassembling.
- 9. Always use a Hoke tube insert (basic part number "T1") when assembling a Hoke Gyrolok® fitting to soft, pliable plastic tubing.
- 10. Always use proper thread lubricants or sealants on tapered pipe threads. Note that thread sealants may have lower temperature ratings than the basic fitting.
- 11. NPT threads should be torqued in accordance with an industry standard, such as Underwriter's Laboratory UL842. Note that previously assembled threads may require additional tightening.
- 12. When installing an NPT ended valve, hold the valve body near the connection with one wrench, while separately wrench tightening the mating pipe. Turn the pipe, not the valve. Follow the same precaution when disconnecting.
- 13. Do not hold the valve handle when tightening an end connection.
- 14. Do not use excessive force to open or close a Ball Valve, e.g., Do not use a handle extension.
- 15. On initial installation, valves may require an adjustment of the packing nut due to storage variations, systems parameters, and cold flow properties of TFE.

FOR YOUR SAFETY: It is solely the responsibility of the system designer and user to select products suitable for their specific application requirements and to ensure proper installation, operation, and maintenance of these products. Material compatibility, product ratings and application details should be considered in the selection. Improper selection or use of products described herein can cause personal injury or property damage.



405 Centura Court PO Box 4866 (29305) Spartanburg, SC 29303 Tel (864) 574-7966 Fax (864) 587-5608 www.circortechnologies.com

#### Circle Seal Controls, Inc.

2301 Wardlow Circle Corona, CA 92880 Tel (951) 270-6200 Fax (951) 270-6201 www.circlesealcontrols.com

#### **CIRCOR Instrumentation, Ltd.**

1-3 Bouverie Road Harrow Middlesex, HA1 4HB UK Tel +44 (0) 20 8423 0113 Fax +44 (0) 20 8864 7008 www.circor.co.uk

#### **CIRCOR Tech**

405 Centura Court PO Box 4866 (29305) Spartanburg, SC 29303 Tel (864) 574-7966 Fax (864) 587-5608 www.circortech.com

#### **GO Regulator**

405 Centura Court PO Box 4866 (29305) Spartanburg, SC 29303 Tel (864) 574-7966 Fax (864) 587-5608 www.goreg.com

#### **HOKE Controls**

2054 Francis St. Ontario, CA 91761 Tel (909) 923-3770 Fax (909) 923-2550

#### **HOKE GmbH**

Weitzesweg 11
Postfach 15 41
D-61118 Bad Vilbel–Dortelweil
Germany
Tel +49-6101-82 56 0
Fax +49-6101-82 56 40
www.hoke.de

#### HOKE, Inc.

405 Centura Court PO Box 4866 Spartanburg, SC 29303 Tel (864) 574-7966 Fax (864) 587-5608 www.hoke.com

#### **Panels Plus**

2054 Francis St. Ontario, CA 91761 Tel (909) 923-3770 Fax (909) 923-2550 www.circor-panelsplus.com

#### **TOMCO**

51 Zima Park
PO Box 4866 (29305)
Spartanburg, SC 29303
Tel (864) 574-7966
Fax (864) 587-5608
www.tomcoquickcouplers.com

#### **CIRCOR Instrumentation Technologies**

#### **Central Europe**

Leeuwenhoekweg 24 2661 CZ Bergschenhoek The Netherlands Tel +31-10-4206011 Fax +31-10-4566774 www.circortechnologies.com

#### LIMITED WARRANTY

ALL CIRCLE SEAL CONTROLS, INC., GO REGULATOR, AND HOKE INC. PRODUCTS ARE MADE TO EXACTING STANDARDS OF DESIGN, MATERIAL, WORKMANSHIP AND QUALITY CONTROL AND ARE WARRANTED TO BE FREE OF DEFECTS IN MATERIAL AND WORKMANSHIP AND REASONABLY FIT FOR THE USES SET FORTH IN SELLER'S CATALOG OR THE CONTRACT SPECIFICATIONS FOR A PERIOD OF ONE YEAR AFTER SALE IF PROPERLY INSTALLED AND MAINTAINED AND UNDER THE NORMAL USE AND SERVICE FOR WHICH THE EQUIPMENT IS INTENDED. BUYER TO INSPECT THE GOODS WITHIN TEN DAYS OF DELIVERY AND TO THEN IMMEDIATELY NOTIFY SELLER OF ANY DEFECTS IN ORDER TO CLAIM A DEFECT. THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES WHETHER THEY ARE STATUTORY, EXPRESS OR IMPLIED, INCLUDING AMONG OTHER THINGS ANY IMPLIED WARRANTY OF MERCHANTABILITY FITTENS FOR A PARTICULAR PURCHASE NOT SET FORTH IN SELLER'S CATALOG, AND ALSO DOES NOT APPLY TO ANY PRODUCTS OF SELLER WHICH HAVE BEEN FRAILED OR MODIFIED OR HAVE BEEN SUBJECT TO MISUSE OR ABUSE. SELLER IS NOT LIABLE FOR ANY CONSEQUENTIAL, INCIDENTAL OR SPECIAL DAMAGES RESULTING DIRECTLY FROM THE DESIGN, MATERIAL, WORKMANSHIP, OPERATION OR INSTALLATION OF ANY OF ITS PRODUCTS AND NEITHER ASSUMES NOR AUTHORIZES ANY OTHER PERSON TO ASSUME FOR IT ANY OTHER LIABILITY IN CONNECTION THEREWITH. BUYER'S EXCLUSIVE REMEDY SHALL BE THE REPAIR OR REPLACEMENT OF ANY SUCH DEFECTIVE PRODUCT AFTER VERIFICATION BY SELLER.

THIS WARRANTY IS IN EFFECT UNLESS SUPERSEDED BY LIMITED WARRANTY, FORM NO. 2299 (4/83)